



Instructions for Design Version - UZY5 Blower Kit



WARNING

RISK OF FIRE AND ELECTRICAL SHOCK!

TURN OFF THE GAS AND ELECTRICAL POWER BEFORE INSTALLING BLOWER!

When installed, make sure to contain any excess wire of the cord set;
Preventing it from making contact with moving or hot objects.

Drywall dust or other fragments may be present in your fireplace's vent space, clean this area before you install the blower kit. Any bearing or motor damage resulting from this condition is not covered by the warranty policy.

This Blower Kit is tested and safe when installed in accordance with these installation instructions. It is your responsibility to read all instructions and consult the Owner's Installation Manual for your particular model number for Supplemental Information before starting installation. Blower operates on 120V/60Hz power.


Blower Kit Parts

Check the contents of the carton.
Make sure nothing was damaged in shipment.
Do NOT install a damaged blower kit!

Description	Qty.
Blower with Mounting Bracket	2
Thermodisc / Heat Sensor	1
Variable Speed Control	1
Cord Set	1
Hardware	1
Installation Instructions (Downloadable)	1

Step 1: Turn Off Fireplace and allow it to cool down. Disconnect from 120V Power. Shut off the Gas supply, if applicable. Remove the louver which covers the lower vent space below the firebox.

Figure: 1 Shows where the fans are positioned in lower rear of the vent space below the firebox.

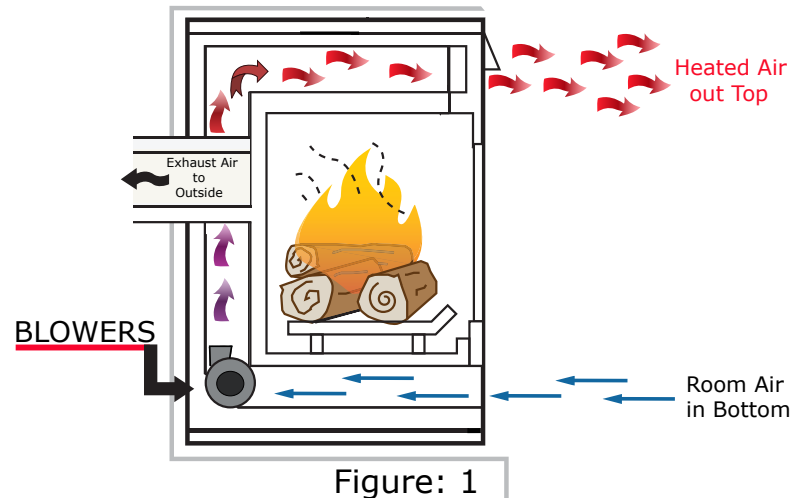

Lay cordset out in a straight line, with the plug furthest away from fireplace.


Attach white wire connector to white wires attached to motors. Attach black wire connector to black wires attached to wires. Plastic connectors slide together.

Push green Ground wire connector onto ground tab on side of blower.
(Figures: 2 & 3)




Step 2: Insert fans into the lower vent space: position them side by side blowing up as seen in Figure: 2. There are 4 metal tabs attached to the floorpan which fit into the notches on blowers' mounting brackets. Position blowers into place. (Figure: 2)

Step 3: Attached the magnetic Thermodisc / Heat Sensor to the underside of the firebox, the magnets will hold it in place. The silver metal disc must be touching the metal underside of the firebox. Peel off clear backing of vlcro on Variable Speed Control and position on right side wall. (Figure: 2)

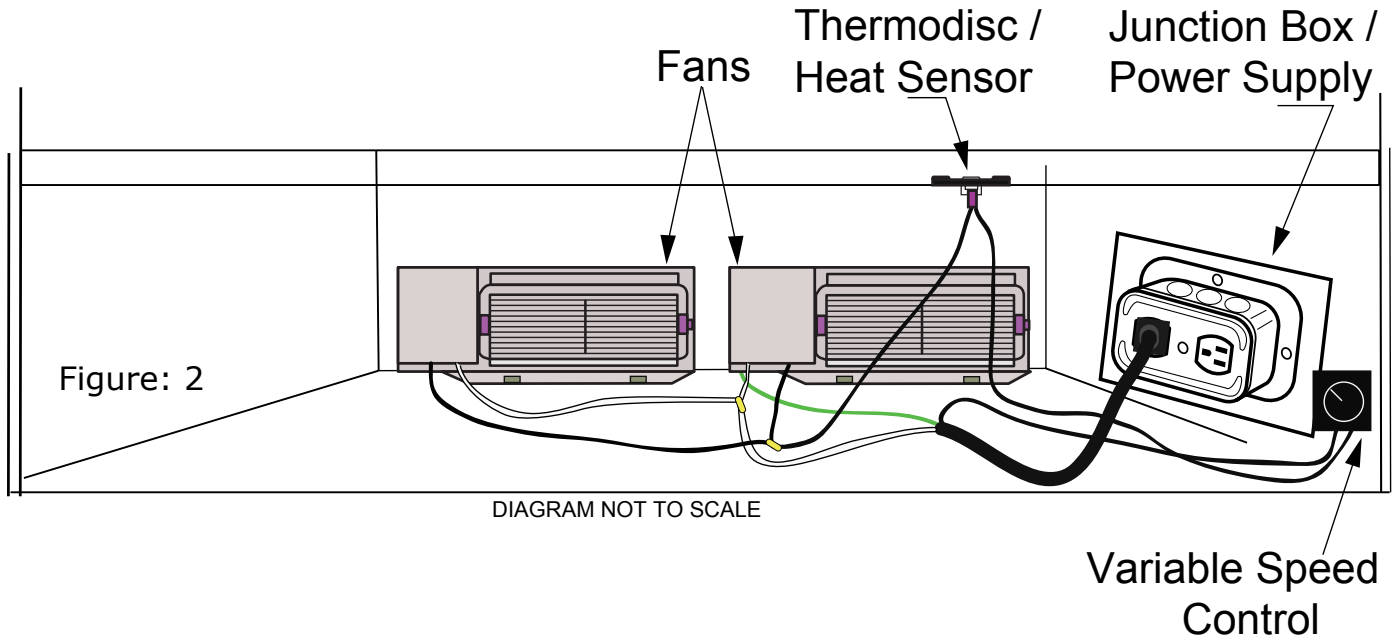

Finishing Steps: Plug power cord into junction box. (Figure: 2) If Appliance is connected to 120 Volt Power, turn power back on. Figure 3 illustrates the wiring diagram.

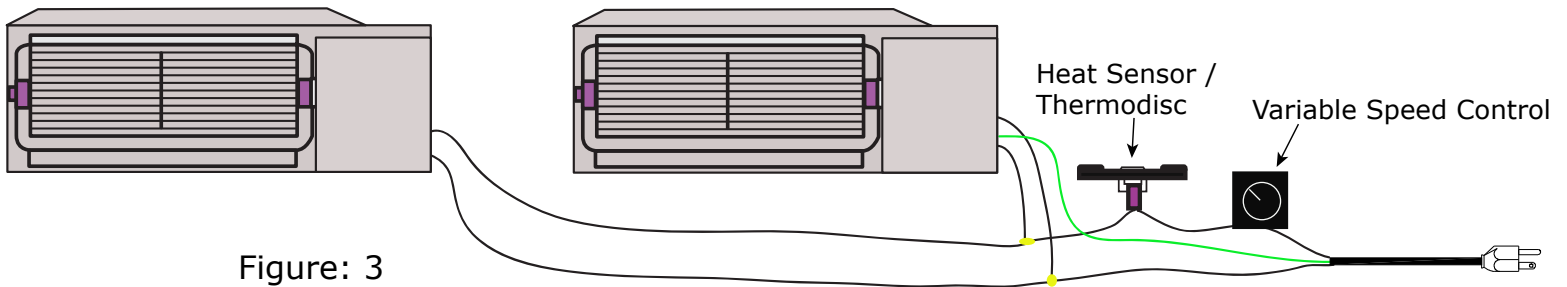

My Fireplace Blower LLC produces and sells aftermarket fireplace blower kits; which require consultation of an Owner's Installation Manual from the Manufacturer of a particular fireplace model number for installation. During Installation of a fireplace blower kit or replacement blower, refer to the Owner's Installation Manual for your particular fireplace model to obtain supplemental information. My Fireplace Blower LLC is not responsible for any damage incurred during installation or resulting from installation of a fireplace blower kit, which was directed and/or conducted from the information within this document.

Installations in Canada must conform to the current CAN/CGAB-419.1 and .2 Gas Installation Code and local regulations. When installing the blower fan kit, it must be electrically grounded in accordance with CSA C22.1 Canadian Electrical Code Part 1 and/or Local Codes.

Installations in the USA must conform to local codes, or in absence of local codes or the National Fuel Gas Code, ANSI Z223.1-1988. When installing the blower fan kit, it must be grounded in accordance with local codes, or in absence of local codes, with the National Electrical Code, ANSI/NFPA 70-1987.