



Instructions for Design Version - WFK36 Blower Kit



WARNING

RISK OF FIRE AND ELECTRICAL SHOCK!

TURN OFF THE GAS AND ELECTRICAL POWER BEFORE INSTALLING BLOWER!

When installed, make sure to contain any excess wire of the cord set;
Preventing it from making contact with moving or hot objects.

Drywall dust or other fragments may be present in your fireplace's vent space, clean this area before you install the blower kit. Any bearing or motor damage resulting from this condition is not covered by the warranty policy.

This Blower Kit is tested and safe when installed in accordance with these installation instructions. It is your responsibility to read all instructions and consult the Owner's Installation Manual for your particular model number for Supplemental Information before starting installation. Blower operates on 120V/60Hz power.

Blower Kit Parts

Check the contents of the carton.
Make sure nothing was damaged in shipment.
Do NOT install a damaged blower kit!

Description	Qty.
Fan	1
Variable Speed Control with Power Cord	1
Mounting Brackets	2
Hardware	1
Installation Instructions (Downloadable)	1

Step 1: Let fireplace cool down.

Attach mounting bracket with 2 screws to each end of base bar. The notch in mounting bracket will be on bottom.

You will notice blower will be tilted on an incline.

See Figure: 1


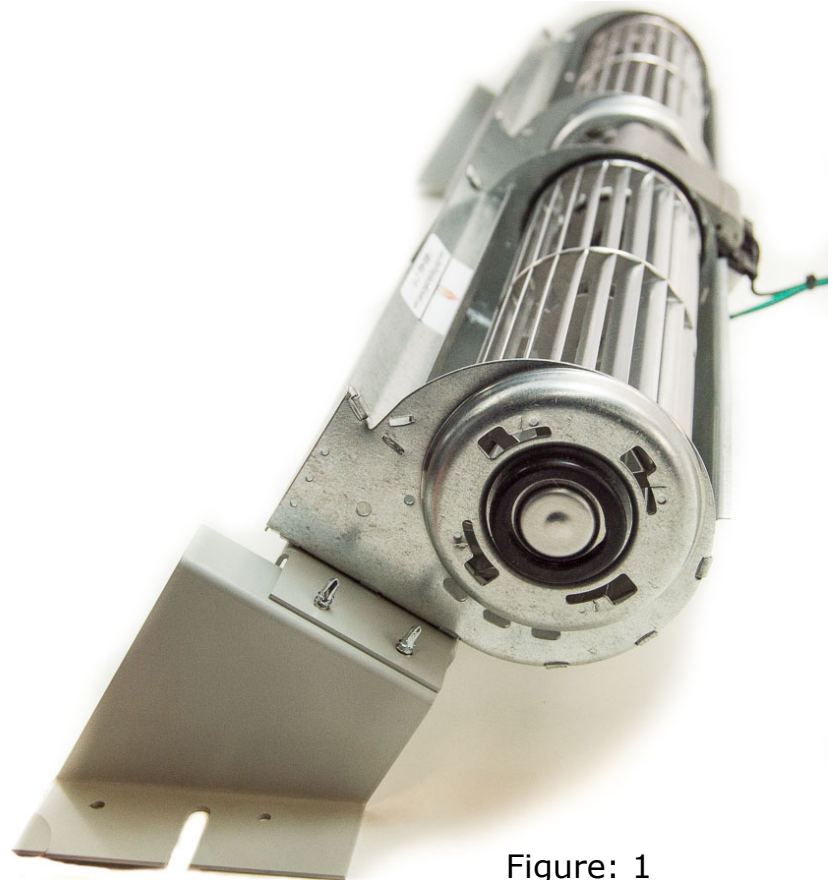 


Figure: 1

 


Step 2: Connect the black & white wires on power cord to either of black wires coming from motor, connect green wire from power cord to green wire on motor. One plastic oval slides into the other. Place the blower inside the lower vent space below the firebox on the floorpan. There are 2 screw studs coming up from the floorpan approx. 25 inches apart, these screw studs fit into the cut outs on each mounting bracket. (Figure: 2) Tighten the included 11/32 nuts on each of the screw studs.

The variable speed control decreases speed as it is turned to the right and turns off when turned to the left. To mount variable speed control to front louver panel/bracket, remove knob & use 11/16 wrench to turn lock nut.

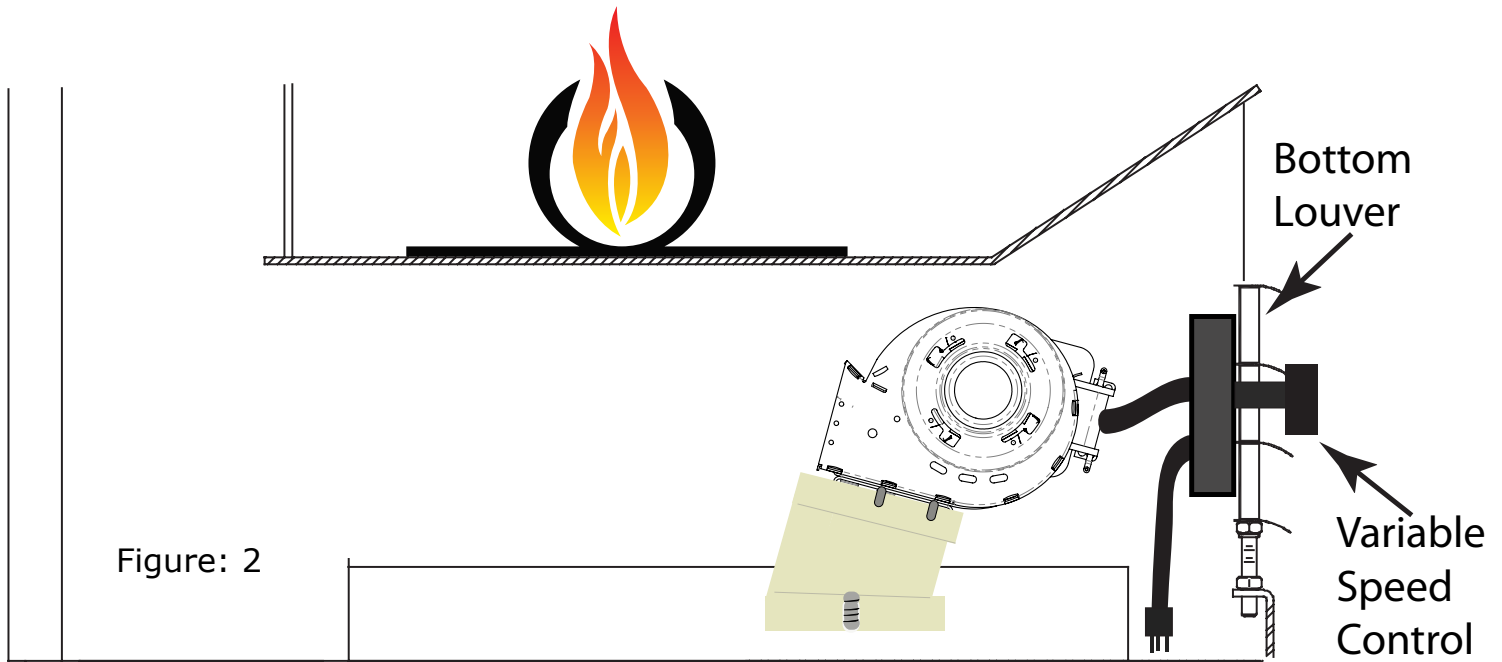

Step 3:

 Plug Blower into Junction Box / Power Receptacle. (Figure: 3)

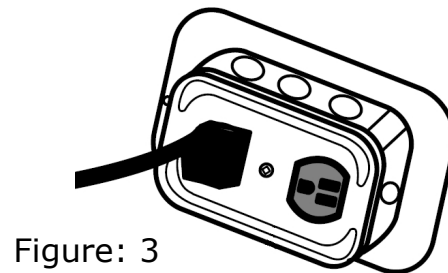

My Fireplace Blower LLC produces and sells aftermarket fireplace blower kits; which require consultation of an Owner's Installation Manual from the Manufacturer of a particular fireplace model number for installation. During Installation of a fireplace blower kit or replacement blower, refer to the Owner's Installation Manual for your particular fireplace model to obtain supplemental information. My Fireplace Blower LLC is not responsible for any damage incurred during installation or resulting from installation of a fireplace blower kit, which was directed and/or conducted from the information within this document.

Installations in Canada must conform to the current CAN/CGAB-419.1 and .2 Gas Installation Code and local regulations. When installing the blower fan kit, it must be electrically grounded in accordance with CSA C22.1 Canadian Electrical Code Part 1 and/or Local Codes.

Installations in the USA must conform to local codes, or in absence of local codes or the National Fuel Gas Code, ANSI Z223.1-1988. When installing the blower fan kit, it must be grounded in accordance with local codes, or in absence of local codes, with the National Electrical Code, ANSI/NFPA 70-1987.